

LUX H8 Install

2011 X5 Installation

Information: Do this at your own risk

Tools Needed:

- Standard (slotted) screw driver

Installation:

- Open the Hood
- Remove the plastic dust cover of the headlight by twisting it counterclockwise.



- Upon removing the covers, lay out everything you'll need to work with so it's all handy.



- Remove the old bulbs by twisting the bulb counterclockwise.



- Disconnect the wire harness by releasing the 2 tabs on the outside of the bulb using the flat blade screwdriver.

- Once removed, plug in your new **LUX H8** by lining up the tabs shown.




- Insert the new **LUX H8** into the headlight, reversing the steps to remove the old bulb. You will need to twist it clockwise until it locks into place with the orange grommet providing a firm seal. You will also need to tuck the wiring and black box into the bottom of the headlight housing. There is plenty of room for a nice comfortable fit.




Installation Tip:

- When inserting the **LUX H8**, there are 3 tabs that need to line up. The 3 tabs form an upside down shape of a “T”. It is helpful to use a marker and put a line or arrow on the base of the LUX unit to figure out which direction is top. This will save you time in installing the unit.
- You can also guide the new **LUX H8** in by looking at it from the outside as shown. Notice how the tabs have rotated into their locked position.

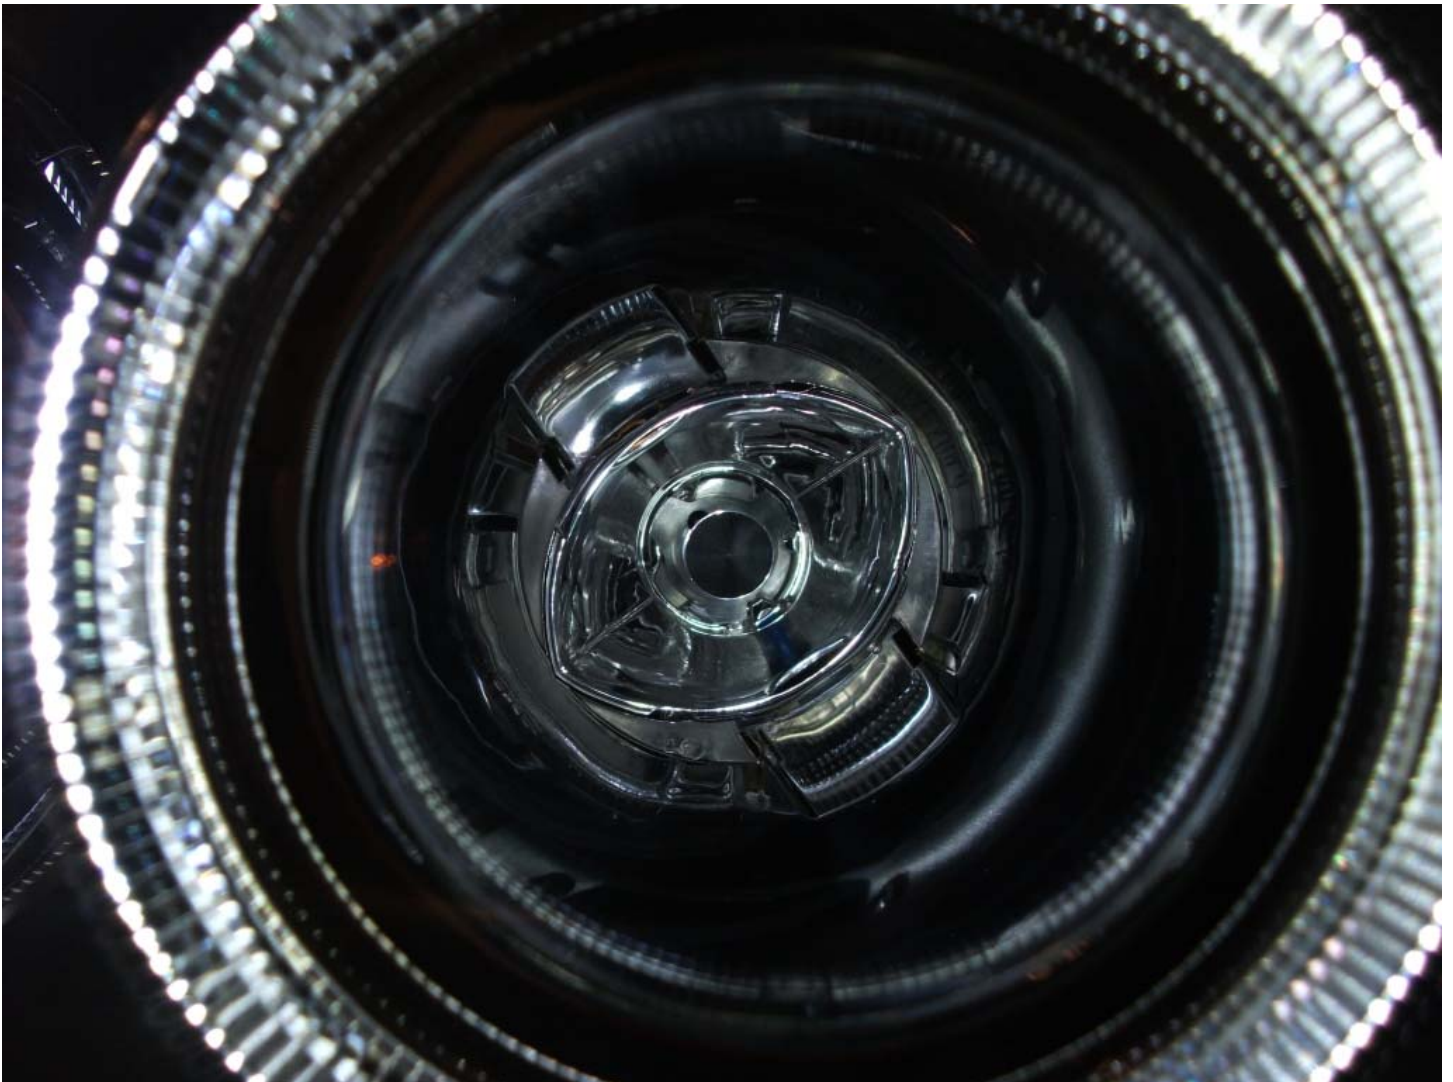

- Upside down “T” configuration of bulb socket.

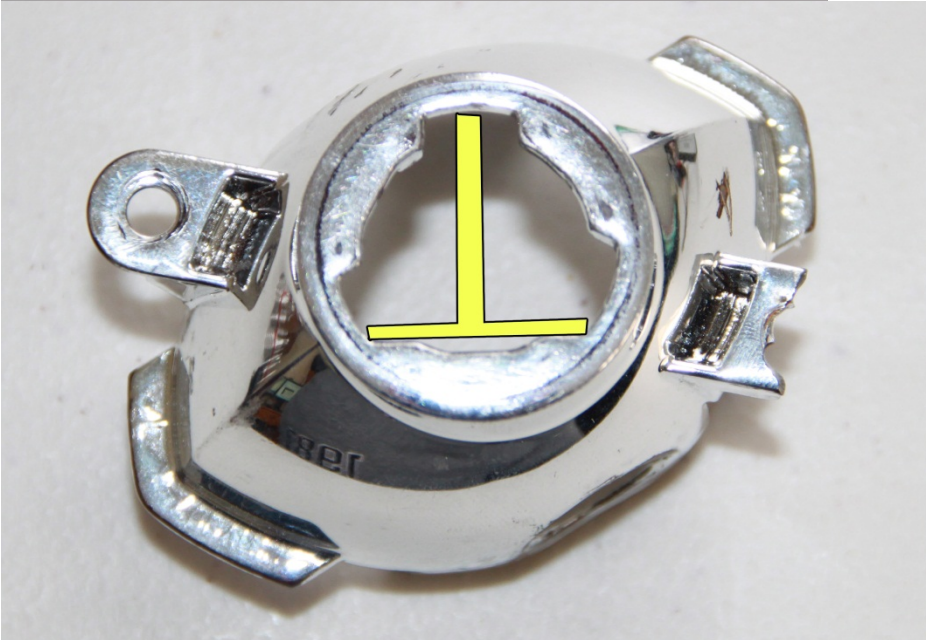

- Ensure all wiring is neatly tucked in and replace factory cap.
- Close hood and enjoy your new LUX H8 LED lights!

